

Fitting a timber floor over a damp concrete subfloor

Harlow


① Harlow Timber Engineered Flooring

② MXA200 Adhesive

This should be trowelled out using the Marldon 3mm or 4mm notched trowel with a coverage of approx. 1KG/sqmetre.

③ MXS140 Damp Proof Membrane

This should be applied by either a roller or poured into ribbons along the surface and trowelled out using a 4mm trowel with a coverage of approx 12.5 – 15 sqmetres / 4 litre unit. The MXS140 will isolate moisture up to 97% RH.

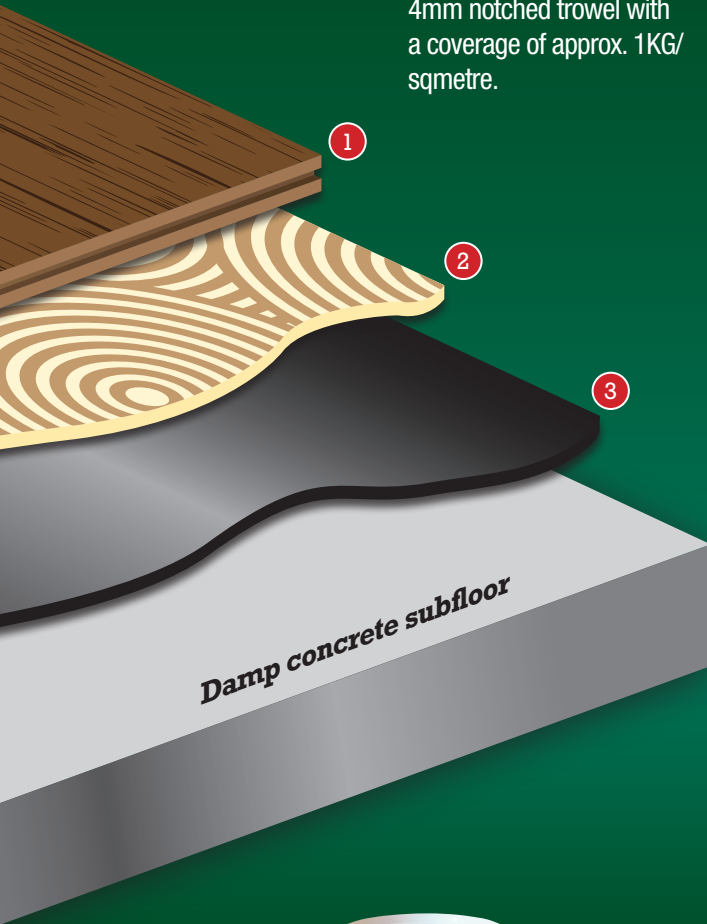

M

MARLDON®

Apply with confidence™

Burton-upon-Trent
Tel: 01258 512190

Coalville
Tel: 01530 832181

Derby
Tel: 01332 574222

Leicester
Tel: 01162 557966

Loughborough
Tel: 01509 842561

Nottingham
Tel: 01159 585311